


Please read the user manual carefully and follow it. This will help to prevent damage of the product, prolong its lifespan; And it will be helpful for your normal use and maintenance, to ensure that your life safety. Please keep the manual properly.

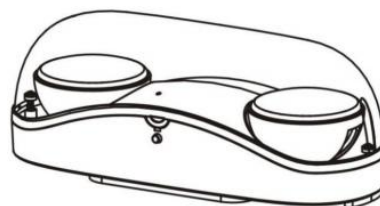

| Part No.    | Input Voltage | Frequency | Power | Rated Current(max) |
|-------------|---------------|-----------|-------|--------------------|
| AN-EX06W-WH | AC 120/277V   | 50/60Hz   | 2.4W  | 0.025/0.01A        |

### WARNING:

1. Installation, service and maintenance should be performed by a qualified licensed electrician.
2. Make all electrical and grounded connections in accordance with national electrical code and any applicable local code requirement.
3. Disconnect power at fuse or circuit breaker before installing or servicing.

### CAUTION:

The battery in this unit may not be fully charged after electricity is connected. Let the connected battery charge for at least 24 hours for normal operation. To test, press the push-to-test switch, the light inside the unit should then turn on.

### IMPORTANT SAFEGUARES:

When using electrical equipment, basic safety precautions should always be followed including the following:

#### READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

1. Review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, and the National Electric code.
3. Disconnect power at fuse or circuit breaker before installing or servicing.
4. Do not mount in hazardous locations, or near gas or electric heaters.
5. Do not let power cords touch hot surface.
6. Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.
7. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
8. Do not use this equipment for other than intended use.
9. All servicing should be performed by a qualified personnel only.
10. Allow battery to charge for 24 hours before first use.

### WIRING DIAGRAM(see Fig 1)

#### AC Wiring

When using 120V AC, connect the black wires to the building utility.

If using 277VAC AC, connect the red wires to building utility.

Connect neutral wire to Shite lead.

Unused wires must be capped using enclosed wire nuts.

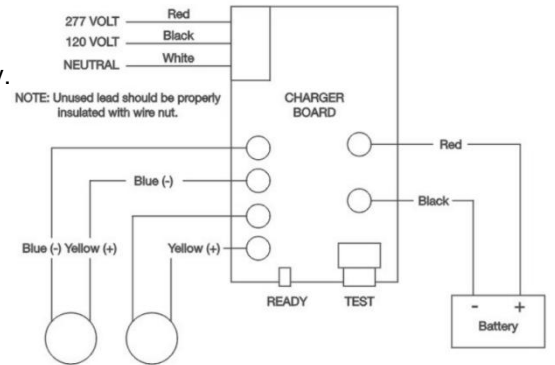


Fig1

### Mounting Instruction

1. Loosen two screws on the housing to remove the lamp cover and the unit.
2. Mount housing onto J-BOX and secure with screws. Drill a hole on the back of the housing to pull the input wires out. (See Fig A) Connect wires through J-BOX. (See Fig A)
3. Connect battery only after continuous AC power can be provided to the unit. (See Fig C)
4. Place the unit back into the housing. Replace the lamp cover and screw back on to the housing. (See Fig C)
5. Apply continuous AC power refer to Fig 1. Press "TEST" button to check for proper operation of the unit.

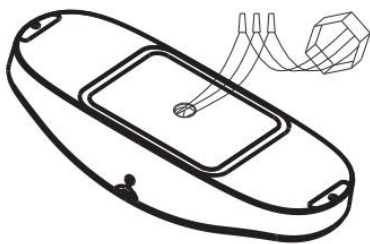


Fig.A(J-BOX)

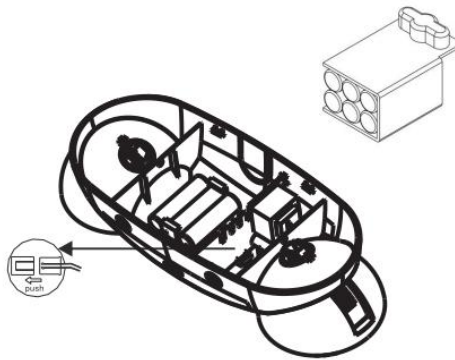


Fig.B

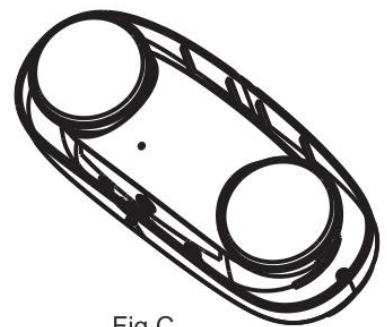


Fig.C

### OPERATION:

1. Apply AC power to the unit. The Led indicator should turn red.
2. After the battery has been left to charge for 2 hours, test the unit by pushing the switch. The Led indicator turns OFF and the lamps on the unit turn ON.
3. When the switch is released, the lamp turns off and the Led indicator turns back to Red.