


Please read instruction before commencing installation and retain for future references. Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician.


Part No.	Power	Input Current	Input Voltage	Frequency	PF	THD	Luminous Flux	CCT	Ra	Warranty
AN-LB2FT-165W-*KD	165W	1.513A	AC120-277V	50/60HZ	>0.9	<20%	22275lm	4000K	>80	5 Years
AN-LB2FT-165W-*KD(MS)	165W	1.513A					22275lm	5000k		
AN-LB4FT-300W-*KD	300W	2.75A					40500lm	5700k		
AN-LB4FT-300W-*KD(MS)	300W	2.75A					40500lm	6500k		

Lifting Rope Installation


1.The hanging rope is shown below.

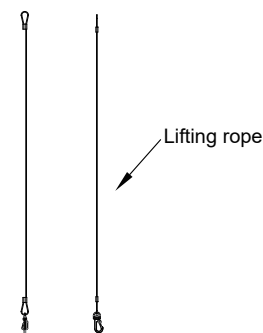


2.Insert the hook into the slotted holes, as shown below.

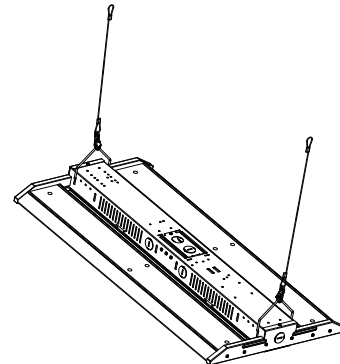


3.Hook the other end of Lifting rope to the ceiling anchor.

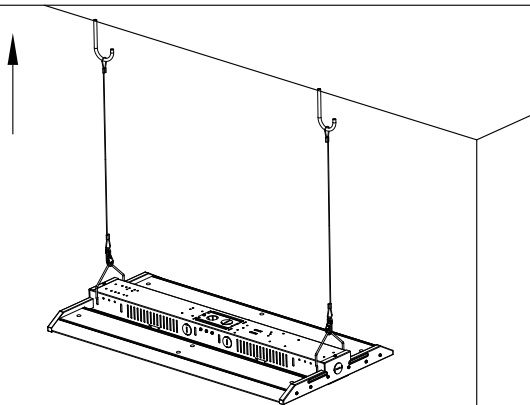


4. Turn off power, and make wiring connections with terminal cap (see wiring instruction below).

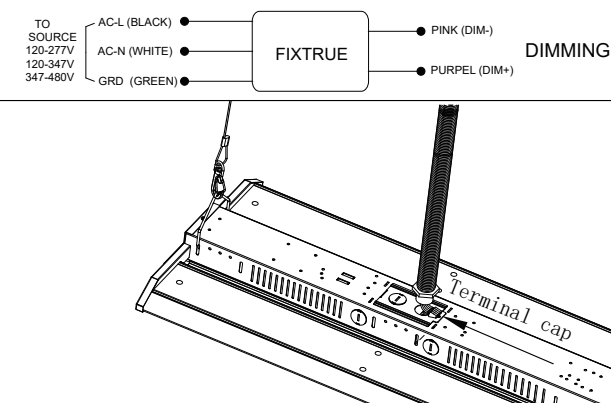

5.Insert the terminal cap and wires into the driver box.


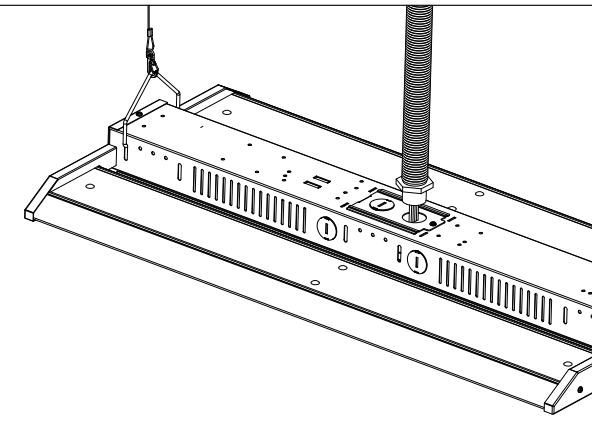


6.Insert the wire terminal joint to the wire entry. Installation completed.


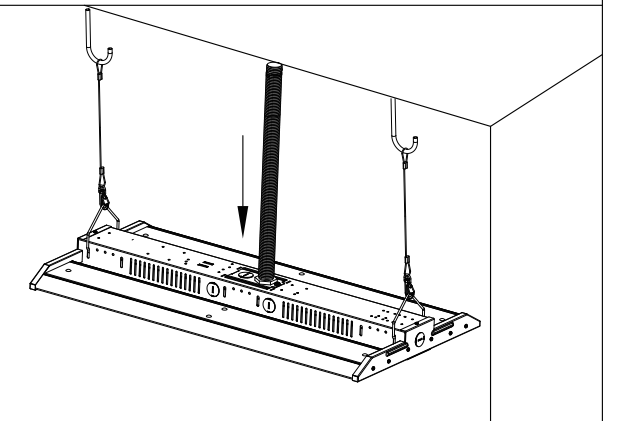


Twist in Sensor Installation Manual (If Applicable)


1.Take out cover cap.

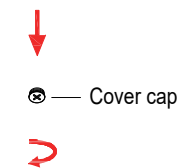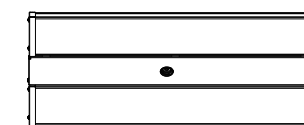


2. Twist in Sensor and tighten up.

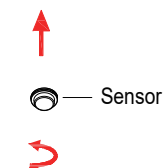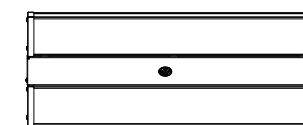

3.Finished Installation.

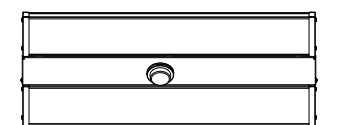

Wiring diagram:

 

- Note:**
- 1.The installation and maintenance must be completed by electricians or professionals.
 - 2.Please cut off the power before installation and maintenance.
 - 3.The thermally insulating material is not allowed to cover the fixture.
 - 4.Please keep away from the corrosive substance, and keep the fixture dry and clean.
 - 5.Working temperature: -40°F~113°F(-40°C~45°C), storage temperature: -40°F~158°F(-40°C~70°C).

The Installation must be carried out by a qualified electrician.