



LED Emergency Wall Pack Light INSTALLATION INSTRUCTION

SAFETY INSTRUCTIONS: Read instructions carefully before attempting to install fixture.

LED one fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING:

Make certain power is OFF before installing or maintaining fixture.No user serviceable parts inside.
Suitable for wet locations


CAUTION:

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.Do not make or alter any open holes in any of the enclosures with wiring or electrical components during installation. Customers are advised to charge emergency LED driver 24 hours every 4 months during storage.

OPERATION:

During normal operation AC power is applied,the charging indicator light is illuminated,indicating that the battery is being charged. When power fails,the emergency LED driver automatically switches to emergency power (internal battery), operating the LED load for a minimum of 90mins. When AC power is restored, the emergency driver returns to the charging mode.

TECHNICAL SPECIFICATIONS

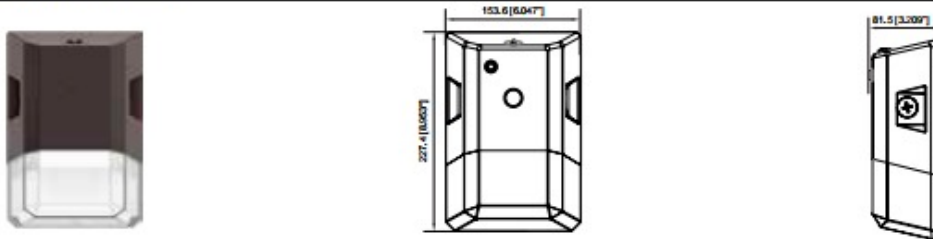

Model	Input Voltage	Power Selectable	CCT Selectable	Rated Current(max)	Emergency Wattage
A-EMWP-15/25W-345KP	120-277V AC 50/60Hz	8W/15W/25W	3000K/4000K/5000K	250mA	4W


TECHNICAL SPECIFICATIONS

Follow instructions below to change fixture Color Temperature (CCT), Power (W) and/or Photocell On/Off option from the factory settings:

Factory Settings: Max wattage, 5000K, Photocell/OFF

1. Locate Selector Switches on side of Housing as shown in Fig. 5. and remove Selector Switch Cover Plug.
2. Select Color Temperature (CCT), Power (W) and/or Photocell On/Off position by sliding the respective switch to the desired value (Fig. 5).
3. Replace Selector Switch Cover Plug.

Fig.5

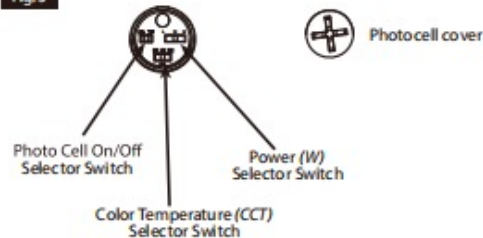


NEW CONSTRUCTION INSTALLATION

1. Secure the quick installation plate onto the J-box. Fig. 1.
2. Remove the sealing plug from the front cover of the lamp body. Fig. 2.

Fig. 1




Fig. 1

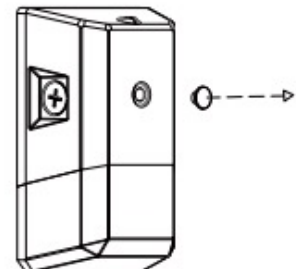

3. Connect the screws through the holes on the front cover to the installation plate. Fig. 3.

Fig. 3

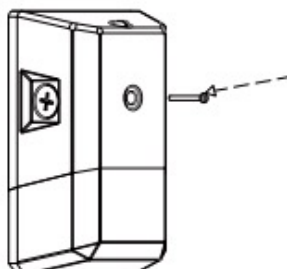

4. Insert the sealing ring. Fig. 4.

Fig. 4

